



LG Machine

# Programming Manual

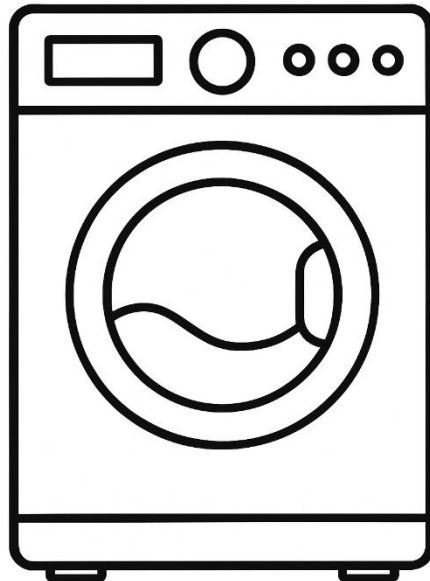




Figure 1

## Programming Mode Access and Payment Configuration

### 1. Enter Programming Mode

- Press and hold **Button 1** and **Button 3** at the same time.

### 2. Access the Setup Menu

- Press **Button 2** repeatedly until the display shows **3**.
- Press **Start.**

### 3. Advance to the Next Step

- Press **Button 1**.
- When **TEST** appears on the display, proceed to the next step.

### 4. Enter System Setup

- Press **Button 2** until the display shows **STUP**.
- Press **Start.**

### 5. Navigate to Payment Type

- When **R9Pr** appears, press **Button 2** repeatedly until **TYPE** appears.
- Press **Start.**

### 6. Select Payment Mode

- When **PDTD** appears, press **Button 2** repeatedly until **UEND** appears.
- Press **Start.**



- Use **Button 2** to select COIN or CARD option:
  - **CARD** – Serial mode
  - **COIN** – Pulse mode

#### 7. **Save Your Selection**

- Press **Start** to confirm and save the chosen payment mode.